

# 4-Port (SDC-4) Quickstart Guide


**Before you start you should have the following:**

- 4 Port (supplied)
- DC Adapter (supplied)
- 4 Port Temperature Sensor
- Ethernet Cable
- Web Browser ( Netscape Navigator v 4.0 and up, or Microsoft Internet Explorer v4.0 and up)
- One available Ethernet Port (on a 192.168 subnet\*)

The 4 Port is a True Network Appliances, meaning it requires no special software loaded on your computer or workstation to operate.

## 1. Plug in Power and Sensors

- Plug in the DC Power Adapter to the DC Power Port of the 4 Port. The red power light should now be on.
- Plug your Ethernet cable's RJ45 jack into the Ethernet port of the 4 Port. The Ethernet Port is a standalone jack. The green link light should now be on.
- Plug in the temperature sensor into either of the sensor ports. Because the 4 Port is equipped with auto-sense, after a few seconds, the green sensor light corresponding to the port you have utilized will come on. If the green light is blinking, the sensor threshold is in a warning or error condition. You will be able to adjust the thresholds once you open the browser interface.

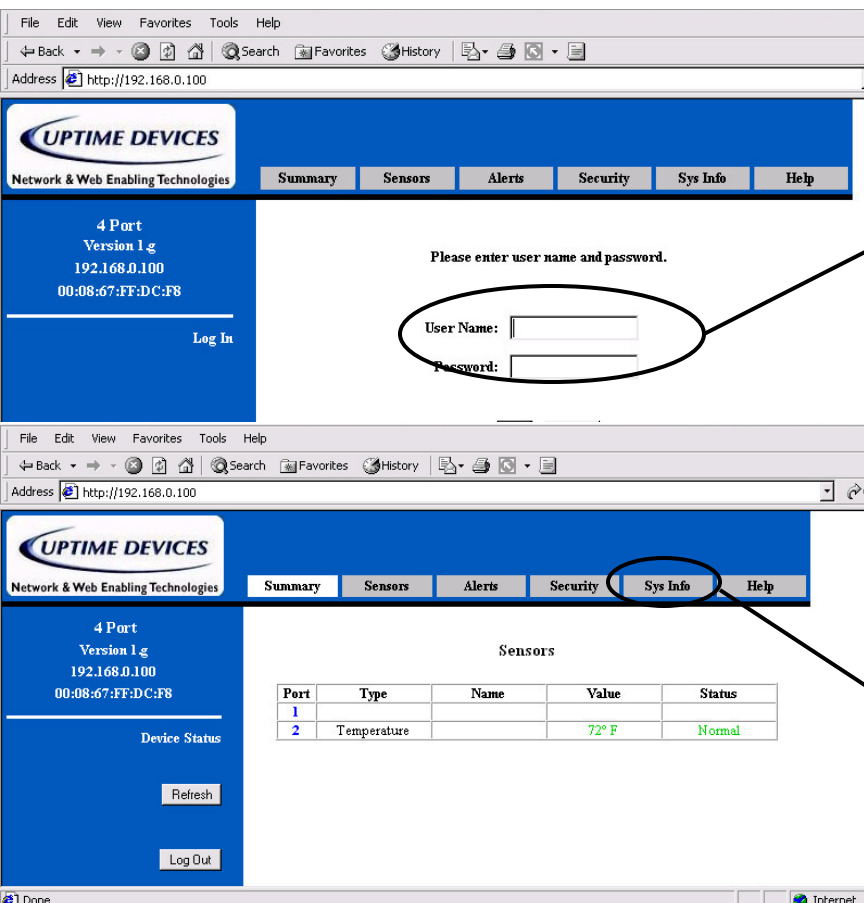

This is your Login screen.

In order to Login and setup your 4 Port please enter in the "User Name" field: "admin". There is no password and this will allow you to edit your 4 Port's set up.

You are now looking at the Summary View. It is being generated by your 4-Port.

Press the "**Sys Info**" Button on the 4-Port's Menu Bar.

\*Note: If you are unable to see the browser or do not have a 192.168 subnet you may use the "IP Set" program which is included in the Documentation and Utilities CD. You may alternatively use the ARP method to set the IP Address (for more information see the SensorHub Manual). For more information regarding additional sensor set-up, E-mail, SNMP Traps, and NNM integration please refer to our website at [www.uptimedevices.com](http://www.uptimedevices.com). Here you will find our FAQ online, Help Topics, product manuals and Quick start guides. Otherwise you can contact our technical support at [support@uptimedevices.com](mailto:support@uptimedevices.com).

## 2. Set Up the 4 Port's IP Address

•In your web browser address line type in the 4 Port's default IP address 192.168.0.100 and press return on your keyboard:

The screenshot shows a web browser window with the address bar set to `http://192.168.0.100`. The browser's menu bar includes File, Edit, View, Favorites, Tools, and Help. The address bar also shows navigation buttons for Back, Forward, Home, Search, Favorites, and History. The main content area is titled "4 Port" and displays the following information:

- 4 Port
- Version 1.g
- 192.168.0.100
- 00:08:67:FF:DC:F8

The "System Information" section is visible on the left. The main configuration area includes the following fields:

- Firmware Version: 1.g
- MAC Address: 00:08:67:FF:DC:F8
- IP Address: 192 .168 .0 .100
- Subnet Mask: 255 .255 .255 .0
- Default Gateway: [ ] . [ ] . [ ] . [ ]
- Domain Name Server: [ ] . [ ] . [ ] . [ ]
- Domain Name: [ ]
- IP Address Acquisition: RARP and DHCP
- System Contact: [ ]
- System Name: SH2
- System Location: [ ]
- Data Sample Rate: 1 Minute
- Web Page Refresh Rate: 0

The "Apply" button is circled in red, and the "IP Address" field is also circled in red.

1. On the 4 Port IP line enter the static IP address you have selected for the 4 Port.
2. Press the **"Apply"** button.
3. (Important: after entering any changes to ANY line, you must press the **"Apply"** button to transfer the changes to the 4 Port. Failure to do so will result in no changes or updates being made.
4. In your web browser, type in the new address of your 4 Port and press return.

\*Note: If you are unable to see the browser or do not have a 192.168 subnet you may use the "IP Set" program which is included in the Documentation and Utilities CD. You may alternatively use the ARP method to set the IP Address (for more information see the SensorHub Manual). For more information regarding additional sensor set-up, E-mail, SNMP Traps, and NNM integration please refer to our website at [www.uptimedevices.com](http://www.uptimedevices.com). Here you will find our FAQ online, Help Topics, product manuals and Quick start guides. Otherwise you can contact our technical support at [support@uptimedevices.com](mailto:support@uptimedevices.com).